



Utility Systems WMD Prepaid User Guide



PREPAID VALVE

READS CONSUMPTION FROM
LINKED WATER METER



KEYPAD

RF CONNECTION TO PREPAID
VALVE

Short codes

- Enter these codes into your CIU followed by enter

Short Code	Description
##	Credits Remaining (kL)
#994#	Meter Serial Number (11 digits)

Common Problems and Solutions

Problem	Solution
Keypad does not connect to the meter	Ensure that the CIU has new batteries fitted
Meter rejects the token that has been entered	Check your slip to ensure you used the correct meter number when purchasing